

CALIBRATION CERTIFICATE

Product:

Genizer stainless steel pressure gauge for high pressure homogenizers, Acc 1.0, according to EN837-1

Specifications:


- Model: G35000
- Pressure Range: 0-250 MPa
- Subdivision: 5 Mpa
- Acc. Class: 1.0 (error margin $\pm 1\%$)
- Connection: 9/16-18UNF, HP4

Calibration Condition:

- Temperature: $20\pm 3^{\circ}\text{C}$
- Relative Humidity: $\leq 80\%$

Date of Issue:

12/06/2021

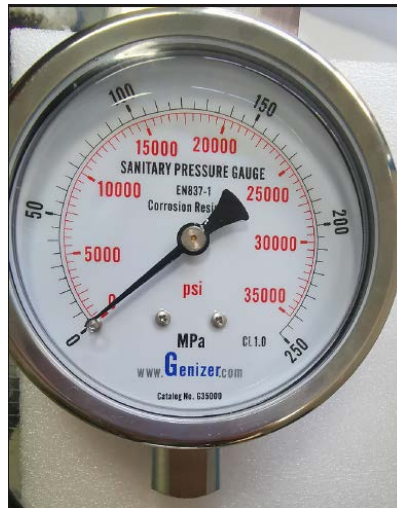

G35000, Pressure Gauge for High Pressure

Standard Reading (Mpa)	Rising (Mpa)	Reference Deviation Range (Mpa)
0	-	-
100	98	97.5~102.5
150	148	147.5~152.5
200	198	197.5~202.5
250	249	247.5~252.5

(The above information is to the best of our knowledge accurate and reliable. However, Genizer makes no warranty, expressed or implied, that parts manufactured from this material will perform satisfactorily in the customer's application. It's the customer's responsibility to evaluate parts prior to use.)